


LIGHTHOUSE CLUB

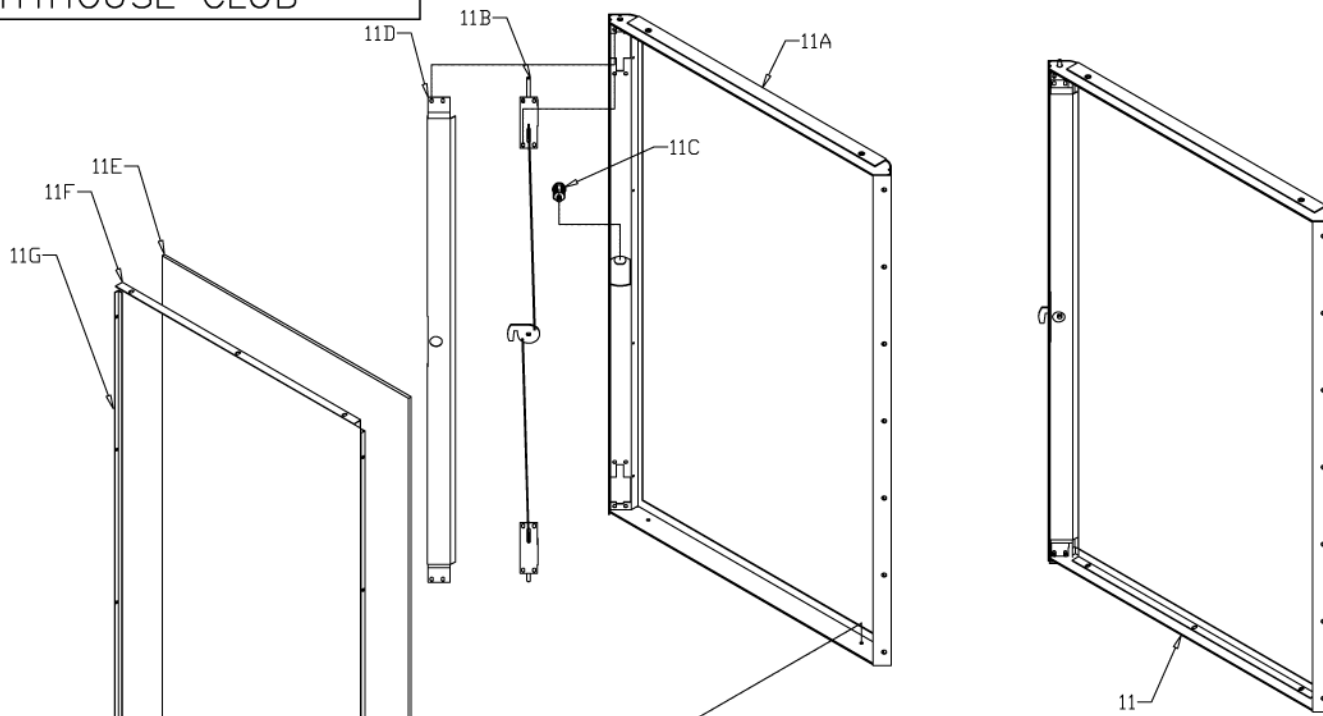

NO	PART NO	DESCRIPTION	QTY	
11	LHC A001	FRONT DOOR ASSEMBLY	1	
SUB ASSY	11A	LHC-SA-23-R1	DOOR FRAME METAL ONLY	1
	11B	LHC A001a	TRIPLE LOCK ASSEMBLY	1
	11C	HM0004	LOCK ANGLE	1
	11D	LHC-FM-34-RO	TRIPLE LOCK COVER	1
	11E	HM1916	FRONT GLASS	1
	11F	LHC-FM-16-RO	FRONT GLASS RETAINER	2
	11G	LHC-FM-32-RO	SIDE FRONT GLASS RETAINER	2
-	A73095	STICKER PLAY INSTRUCTION	1	
02A	LHC A002a	COINDOOR DOUBLE SLOT ASSY	1	
PART ITEM	02A1	HM0004	LOCK ANGLE	1
	02A2	LHC-FM-53-RO	THANDLE COVER	1
	02A3	LHC-SA-11A-RO	COINDOOR DOUBLE SLOT METAL ONLY	1
	02A4	HA0014	COIN MECHANISM	2
	02A5	EA0520	SWITCH SMALL ROUND GREEN BUTTON	1
	02A6	EA0519	SWITCH SMALL ROUND RED BUTTON	1
	-	LHC H003	COINDOOR DOUBLE SLOT HARNESS	1
02B	LHC A002b	COINDOOR 1 DBA 1 SLOT ASSY	1	
PART ITEM	02B1	HM0004	LOCK ANGLE	1
	02B2	LHC-FM-53-RO	THANDLE COVER	1
	02B3	LHC-SA-11B-RO	COIN DOOR DBA METAL ONLY	1
	02B4	-	DOLLAR BILL ACCEPTOR	1
	02B5	HA0014	COIN MECHANISM	1
	02B6	EA0520	SWITCH SMALL ROUND GREEN BUTTON	1
	02B7	EA0519	SWITCH SMALL ROUND RED BUTTON	1
-	LHC H002	COINDOOR 1 DBA 1 SLOT HARNESS	1	

OPTIONAL SECURITY PARTS

-	LHC-FM-61-RO	COIN DOOR COVER	1
-	LHC-FM-63-RO	DBA COVER	1
-	LHC-FM-46-RO	COVER FRONT DOOR	1
-	LHC-FM-45-R1	SAFETY COVER COIN DOOR	1

