


LIGHTHOUSE STANDARD

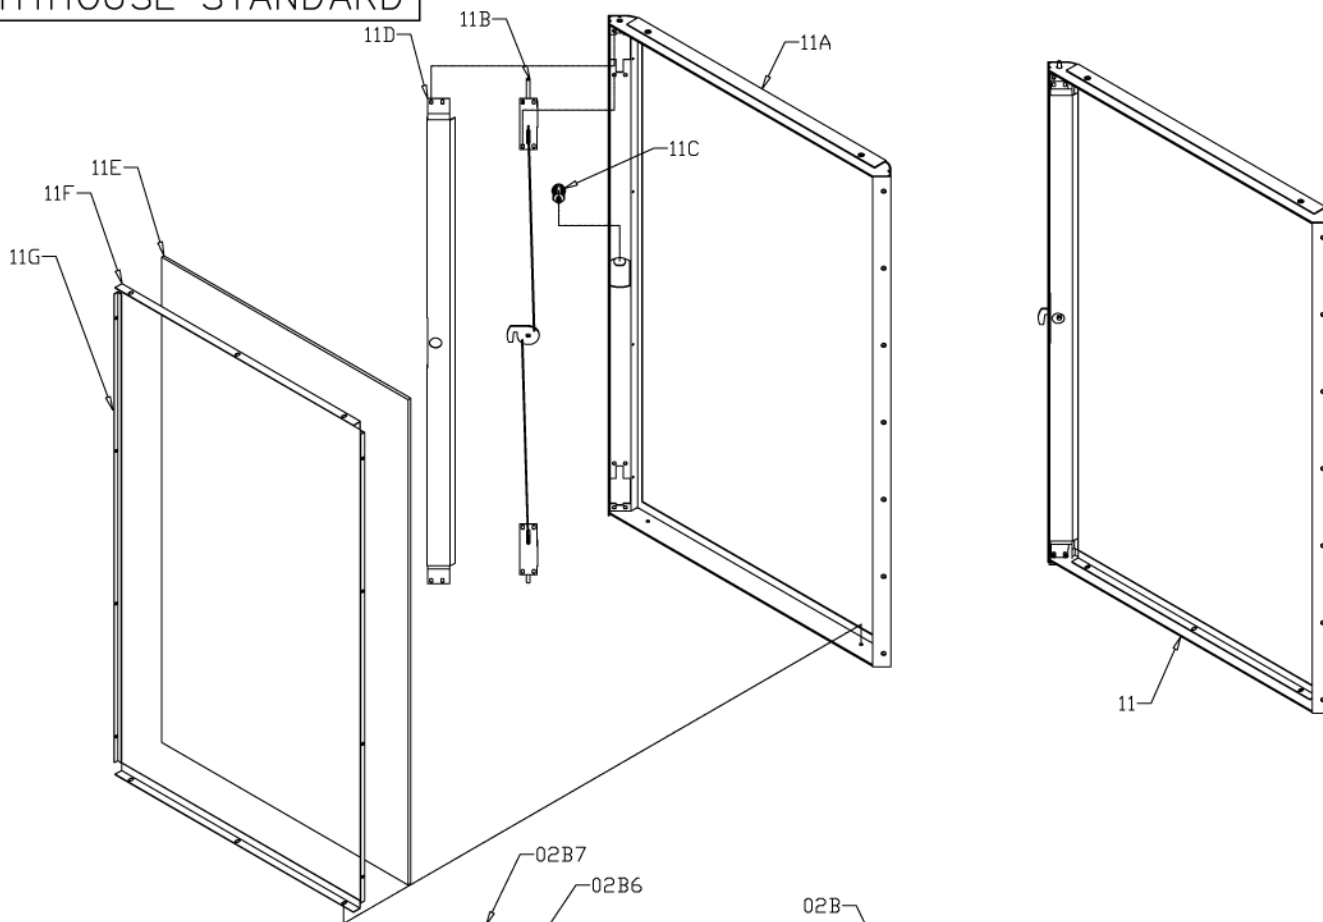

NO	PART NO	DESCRIPTION	QTY	
11	LH1 A001	FRONT DOOR ASSEMBLY	1	
SUB ASSY	11A	LH1-SA-23-R1	DOOR FRAME METAL ONLY	1
	11B	LH1 A001a	TRIPLE LOCK ASSEMBLY	1
	11C	HM0004	LOCK ANGLE	1
	11D	LH1-FM-34-RO	TRIPLE LOCK COVER	1
	11E	HM1916	FRONT GLASS	1
	11F	LH1-FM-16-RO	FRONT GLASS RETAINER	2
	11G	LH1-FM-32-RO	SIDE FRONT GLASS RETAINER	2
-	AT2955	STICKER PLAY INSTRUCTION	1	
PART ITEM	02A	LH1 A002a	COINDOOR DOUBLE SLOT ASSY	1
	02A1	HM0004	LOCK ANGLE	1
	02A2	LH1-FM-53-RO	THANDLE COVER	1
	02A3	LH1-SA-11A-RO	COINDOOR DOUBLE SLOT METAL ONLY	1
	02A4	HA0014	COIN MECHANISM	2
	02A5	EA0520	SWITCH SMALL ROUND GREEN BUTTON	1
	02A6	EA0519	SWITCH SMALL ROUND RED BUTTON	1
-	LH1 H003	COINDOOR DOUBLE SLOT HARNESS	1	
PART ITEM	02B	LH1 A002b	COINDOOR 1 DBA 1 SLOT ASSY	1
	02B1	HM0004	LOCK ANGLE	1
	02B2	LH1-FM-53-RO	THANDLE COVER	1
	02B3	LH1-SA-11B-RO	COIN DOOR DBA METAL ONLY	1
	02B4	-	DOLLAR BILL ACCEPTOR	1
	02B5	HA0014	COIN MECHANISM	1
	02B6	EA0520	SWITCH SMALL ROUND GREEN BUTTON	1
	02B7	EA0519	SWITCH SMALL ROUND RED BUTTON	1
-	LH1 H002	COINDOOR 1 DBA 1 SLOT HARNESS	1	

OPTIONAL SECURITY PARTS

-	LH1-FM-61-RO	COIN DOOR COVER	1
-	LH1-FM-63-RO	DBA COVER	1
-	LH1-FM-46-RO	COVER FRONT DOOR	1
-	LH1-FM-45-R1	SAFETY COVER COIN DOOR	1

